



## 4eBin™ Scoop bin

Maintenance & cleaning

# Cleaning

Maintain freshness and attractive presentation

- / The 4eBin™ Scoop bin is sealed along edges with a spill proof lid
- / With the easy-clean method, the bin can be cleaned without dismantling it entirely from the shelf rack. Just remove the top part and clean the container in place
- / We recommend you to clean your bins regularly

## Easy-clean


The 4eBin™ Scoop bin can be cleaned without dismantling entirely from the shelf rack. Just take out the top part and leave the container installed to clean it.

The recommended frequency of cleaning will depend on the stock rotation speed and on the type of merchandise displayed. For instance, fat or oily products require more frequent cleaning.

For regular cleaning, prefer a disinfectant based on Chlorine Dioxide (ClO<sub>2</sub>).

### Do not use an alcohol-based disinfectant.

Alcohol-based disinfectants will make the plastic brittle and shorten the lifetime of the bin.

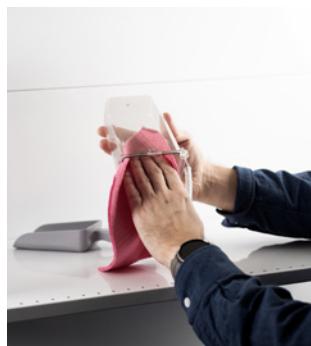

## Total cleaning


Handwashing is preferable over using a dishwasher in order to limit exposure to water and high temperature. The container part and the scoop can be washed in a dishwasher. Settings should be at the lowest possible temperature and shortest duration (below 50 °C, 120 °F, and always in the top tray).



Some customers prefer not to do the cleaning themselves - your HL Display representative can help you source a cleaning service for your bulk bins.

## Component overview

See below all the components of the **4eBin™** Scoop bin system.

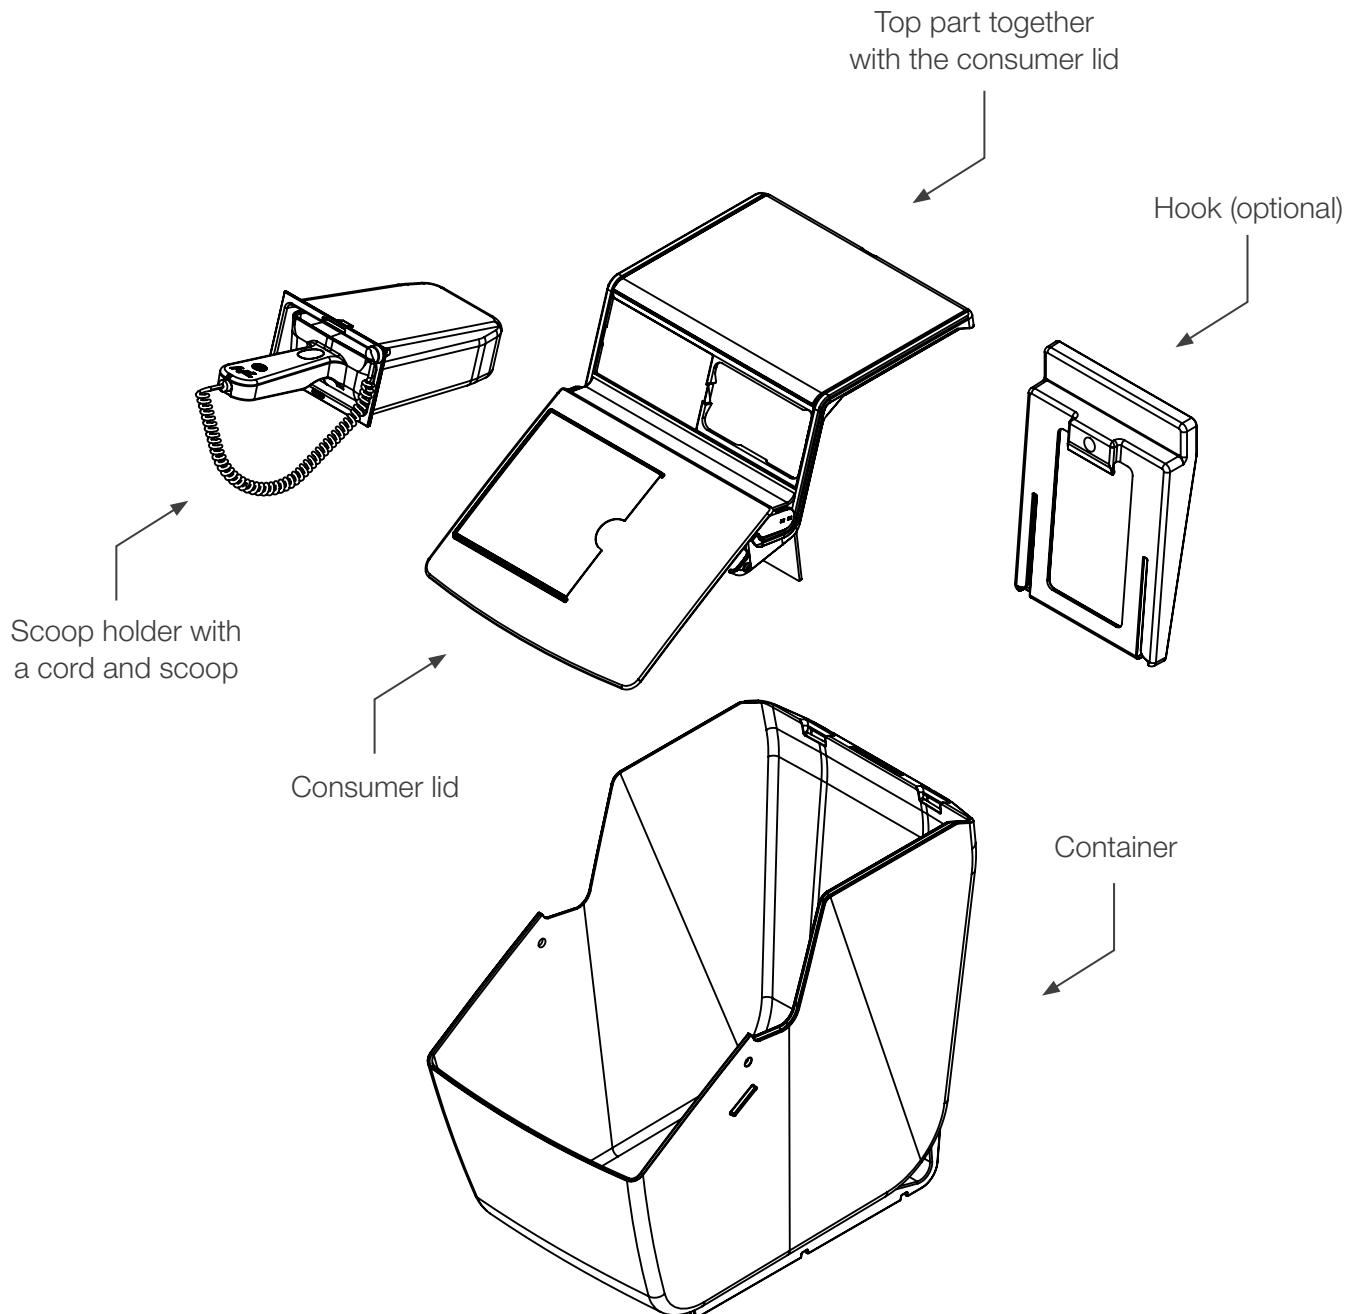

# Bin disassembling

To disassemble, follow the instructions below:

**1** Open the consumer lid and unlock the top part by pulling the handles on the inside towards the middle



**2** Rotate upwards and then pull out to release the top part, together with scoop holder, cord and scoop



**3** Remove scoop holder by pressing on both top and bottom sides while gently pulling it out



**4** Remove scoop holder from top part, together with cord and scoop



Remember to remove labels, label holders and hook (if it is used) before washing the bin

# Bin assembling

To assemble, follow the instructions below:

**1** Hook the top part into the container using the two snaps in the back. The top part needs to be in a slight upward angle



**2** Assemble the top part by folding it down while making sure the edges are aligned



**3** Firmly press down the top surface just behind the lid to snap the top part in place



**4** Insert the scoop holder into the top part, secure by snapping top and bottom in place. Press down top of scoop holder inside the bin to check if securely mounted



Remember to mount back the label holders and hook (if it is used) after washing the bin

**HL DISPLAY AB**

Cylindervägen 18 Box 1118  
131 26 Nacka Strand, Sweden

Tel +46 8 683 73 00

[www.hl-display.com](http://www.hl-display.com)  
[info@hl-display.com](mailto:info@hl-display.com)

